


THE JAMES WALKER CO.

CABLE TERMINALS


HOW TO ORDER CABLE ASSEMBLIES

1. SPECIFY DIAMETER, CONSTRUCTION, AND GRADE OF WIRE ROPE.
2. SPECIFY COMPLETE PART NUMBER OF TERMINALS as shown in the tables.
3. SPECIFY THE PLANE OR POSITION OF ONE TERMINAL TO THE OTHER.
4. SPECIFY LENGTH OF COMPLETE ASSEMBLY. Length should be measured from points illustrated for each terminal.

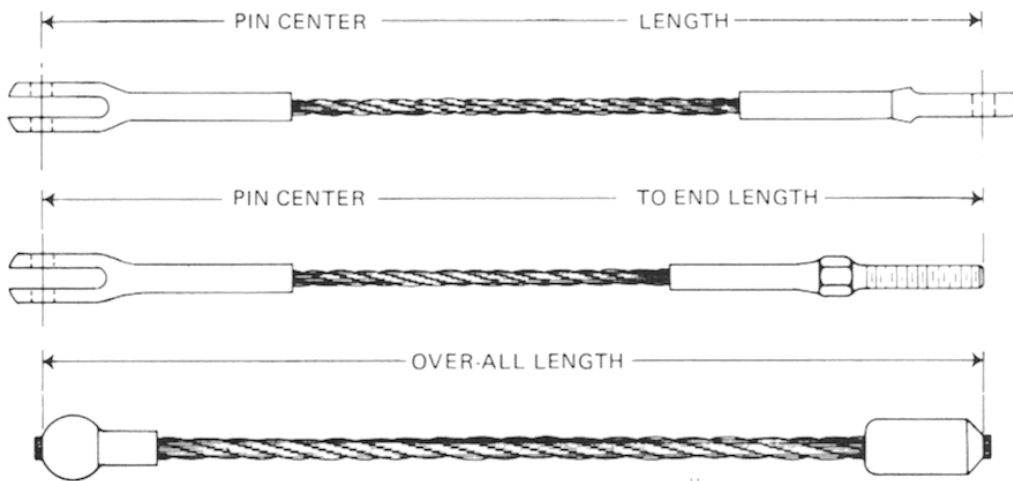

BALL AND SHANK MS20664C

Corrosion-Resistant Steel

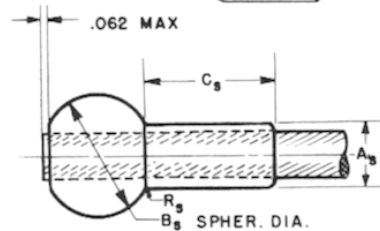

DASH NO.	NOM. ROPE DIA.	NOM-INAL STR. (LBS.)	A _S		B _S		C _S REF.	R _S MAX. RAD.
			DIAMETER		DIAMETER			
-2	1/16	480	.112		.190		.156	.014
-3	3/32	920	.143	+ .000 - .003	.253	+ .000 - .003	.234	.019
-4	1/8	2000	.190		.315		.313	.023
-5	5/32	2800	.222	+ .000 - .004	.379	+ .000 - .004	.391	.028
-6	3/16	4200	.255		.442		.469	.033
-7	7/32	5600	.302	+ .000	.505	+ .000	.547	.038
-8	1/4	7000	.348	- .005	.567	- .005	.625	.042
-10	5/16	9800	.413		.694		.813	.046

WARNING: DO NOT EXCEED RATED CAPACITIES